




PIT-BOX INSTRUCTIONS

1. Locate the Pit-Box in proper location as indicated by the plans.

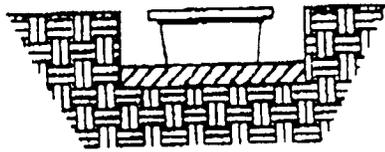


2. Set depth with top edge of the box flush with the finished floor.
3. Either pour footing or pack ground under box to create solid foundation.




4. Install 6" PVC pipe approximately 2" through the side walls of box as indicated by plans.
5. Cut 3/4" thick plywood to fit in the inside lip at the top. Cover to be poured later. Secure the plywood with two screws to hold it firmly in place.
6. Put small amount of dirt around the outside of all four sides at the bottom to secure it in place while pouring concrete.

7. The pit-box is now ready to be permanently secured with concrete poured all around.

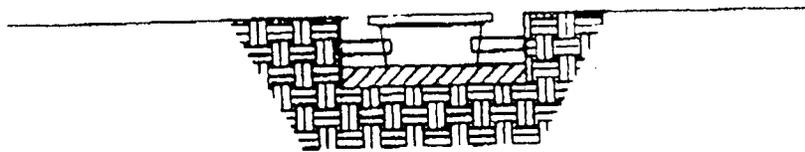


8. After concrete is allowed to set, remove 3/4" plywood to access box. Save the plywood to use when pouring box lid. Do not insert the screws when pouring the lid.

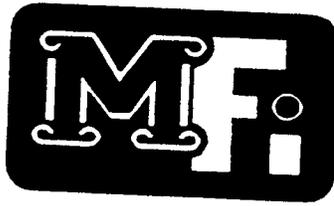


Moone's Fiberglass, Inc.

**SPECIALIZE IN CUSTOM
MANUFACTURED FIBERGLASS
PRODUCTS**

**INDUSTRIAL & COMMERCIAL
FIBERGLASS REPAIR**

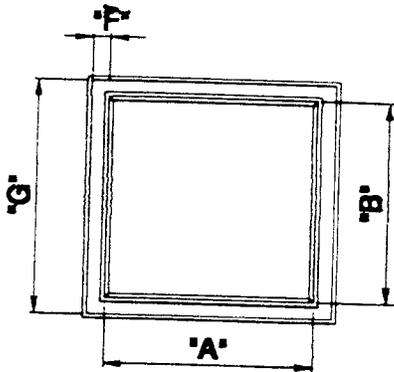


PIT-BOX PLAN

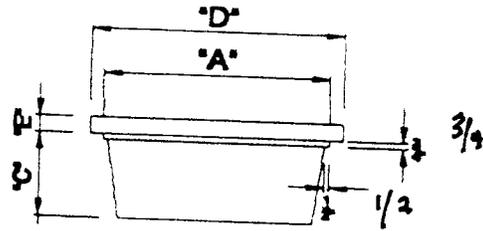

PIT-BOX ELEVATION

MODEL	A	B	C	D	E	F	G
8201	24	24	16	28	2	2	28
9201	24	48	16	28	2	2	52
1201	24	60	16	28	2	2	64
827	24	24	10	28	2	2	28
830	24	36	16	40	2	2	40

PO BOX 219
403 N WISON ST
WALSTONBURG, NC 27888

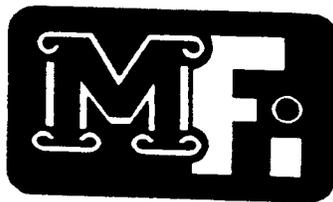

PHONE: 252-753-2583
FAX: 252-753-2394